
Medify Air

Model: MA-40

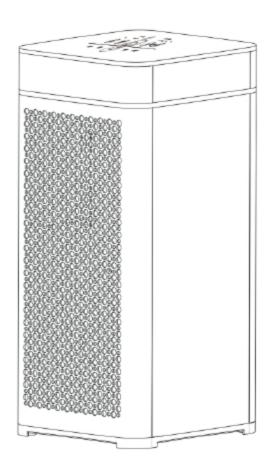

Read and follow these instructions.

Use unit according to instructions provided in this manual.

Keep manual for future reference.

Technical Data:

Voltage: 110-120 V AC 60 Hz

Power rating: 68 W


Noise level: <66 dB(A)

Unit dimension: 22"H x 9.9"W x 10.9"D

Unit weight: 15.5 lbs.

Medify Air
579 Route 22 West
North Plainfield, NJ 07060
(302) 659-8104
info@medifyair.com
www.medifyair.com

CONTENTS

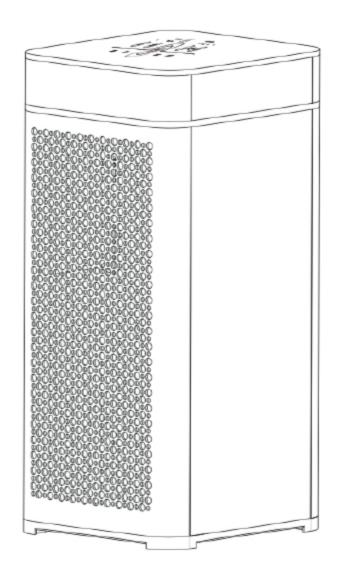

1. Safety Precautions	3
2. Product Information	4
3. Before Use	5
Learning about air quality indicator light	5
Disassembly and installation methods of back cover	6
Placement of air purifier	6
Install Filter Set	7
4. Filter Purification: Four Steps	8
5. How to Use	9
Description of control panel functions	9
Turn on the air purifier	9
Manual adjustment of fan	10
Timer mode	10
Ionizer/Anion mode	10
Child-lock function	10
Photosensitive sensor	10
6. Maintenance and Cleaning	11
Clean the air purifier	11
Clean air quality sensor	11
Change filter	12
7. Warranty	13
Warranty and service	13
Order filters	13
Lifetime Warranty	14

1. Safety Precautions

In order to avoid possible damage, make sure to pay attention to the following safety precautions. If anything is not working as expected, contract Medify Air Customer Service.

Please turn off the power immediately in case of the following situations:

- Malfunction of any switch
- Circuit failure
- Abnormal heating of wires or plugs
- Any burnt smell, abnormal sound or shock
- · Any other malfunction



WARNING



Do not touch power plug with wet hands.



Turn off the power before cleaning machine.





This is a 110v unit. Only use with a 100v power supply for North America use. Do NOT use a 220v power supply or you will destroy the unit and render the warranty void.



Do not take apart or modify unit without authorization.

2. Product Information

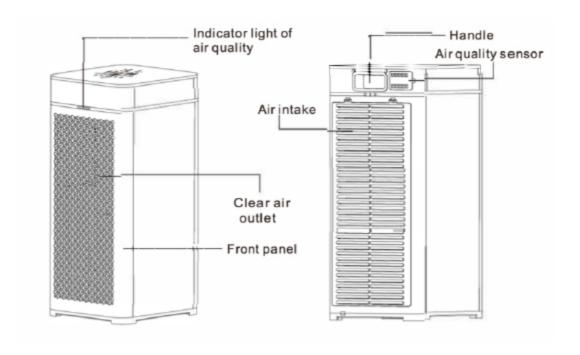

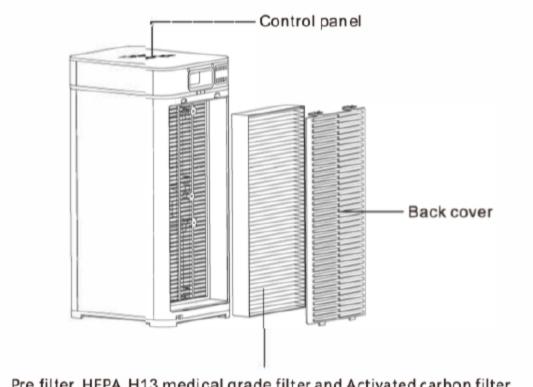


Pre filter, HEPA H13 medical grade filter and Activated carbon filter

3. Before Use

Learning about air quality indicator light

 Air quality indicator reflects the current air quality condition.




Air quality indicator light

Air Quality Indicator Light Index Blue Excellent Green Average Red Poor

Disassembly and installation methods of back cover

- Press tabs on the back cover and pull on the cover. Then lift the back cover and pull out slightly.
- 2. To reinstall back cover, align at fixed groove and insert cover into groove. Frame will snap into place using the top button.

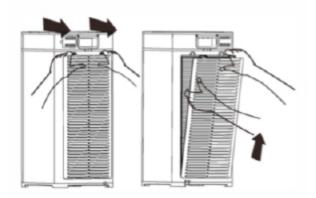




Placement of air purifier

Do not obstruct air intake or clean air outlet.

To ensure sufficient air circulation, make sure there is a 20 inch or 50 cm distance between air inlet and wall or nearby furniture.

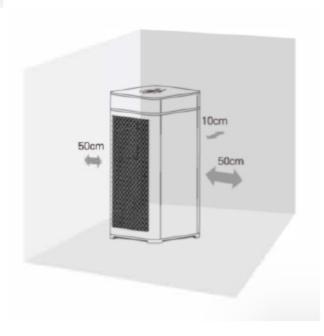

Install filter set

All filters must be used together.
Please disassemble filters according to the following instructions.
Reinstall the filters accordingly.

1. Place the machine in a dry location on a smooth and flat surface.




 Remove exterior packaging of the filter sets. Place filters back into the air purifiers after packaging is removed.





Press top button in the back cover and pull the cover. Lift the back cover and pull out slightly.

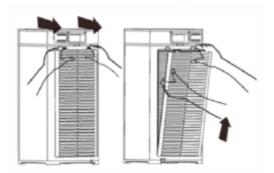

Do not disassemble filters.Filters sets come in one piece for maximum efficiency. 5. To reinstall the back over, align at the fixed groove and insert the cover into the groove. The top button should snap into place.



4. Filter Purification: Four Steps

First step: Pre filter

Second step: H13 HEPA filter

Third step: Activated carbon filter Fourth step: Anion generator

1. Pre-Filter

Removes larger particles including hair, fibers, dander, and others.

2. HEPA H13 Filter


This removes 99.97% of particles down to 0.3 microns as well as PM2.5 particles such as, smoke, pollen, dust mites and others.

3. Activated Carbon Filter

Absorbs odors, harmful VOCs, and other toxic substances such as formaldehyde.

4. Ionizer/Anion Generator

Produces negative ions to neutralize positively charged particles such as dust, bacteria, mold spores, pollen, animal dander and other airborne positive particles.

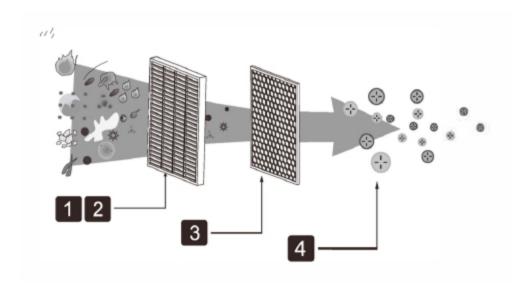


5. How to Use

Description of control panel functions




Plug in

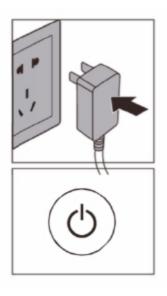

After plugging in, the air purifier will beep. Indicator lights will flash. Then indicator lights will turn off.

Turn on the air purifier

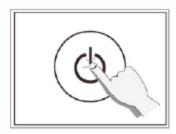


Press ON/OFF button. Unit will start in AUTO mode, with indicator light on.

The air quality sensor will detect the air quality automatically after 2 minutes. Unit needs tome to calibrate and calculate air quality properly.




Press ON/OFF button again to turn off the unit. Unit will beep, power light will flash, then pull out plug.

 Manual adjustment of fan



Press SPEED button to choose air speed 1, 2, 3, 4. In AUTO mode, unit will choose fan speed based on the air quality.

TIMER mode

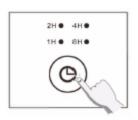

Press TIMER button and choose hour options: 1, 2, 4, 8 or no timer

Ionizer/Anion mode



 
Press Ionizer/Anion button. Unit will sound and indicator light will be on. Press Ionizer/ Anion button again and the indicator light will turn off.

Child-lock function



In this mode, none of the function keys can be used or changed. (Except the child lock function). To turn on the child lock, hold the button down for 3 to 5 seconds. To turn off the child lock function, hold the button down for 30 to 45 seconds.

Photosensitive sensor



In AUTO mode, if the lighting in the room is dark, the unit will enter SLEEP mode. When this occurs, all indicator lights will be off except the power light. The fan speed will change to low speed.

6. Maintenance and Cleaning

Please make sure to pull out power plug before cleaning the unit. Do not immerse machine in water or any other liquid. Do not use abrasive, corrosive or flammable products to clean any parts of the unit. The unit uses composite filters, so filters cannot be washed.



Clean the air purifier

Clean the air purifier regularly to prevent dust accumulation.

Use soft and dry clothes to remove dust from the air purifier.


Clean air quality sensor

Clean the air quality sensor once a month by removing the sensor door and taking a hair dryer and blow air into the sensor for 10 seconds. This is a high-quality laser sensor and the air will blow off any accumulation of dust or particles to keep sensor working at peak performance.


 Use soft brush, or cloth, to clean intake and outlet of air quality sensor.



Disassemble the cover of air quality sensor.

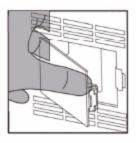


Reinstall the cover of air quality sensor.

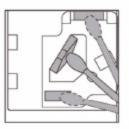


Change filter

1. Remove all existing filters from the unit.

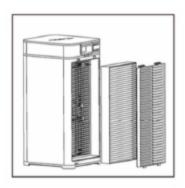


Remove all packaging from new filter. Insert new filter and reinstall side cover, which will snap back in automatically.

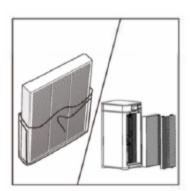



3. When the filter replacement is completed, plug in and turn on the air purifier. Press the SPEED button and ANION button for 3 seconds to reset the unit.

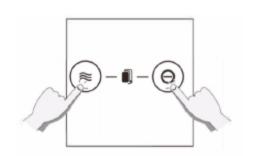



Attention

Turn off and pull out power plug before replacing the filters. If replacement filter indicator light flashes again after replacement, press the reset button at the side (as shown) until indicator light resets itself.

7. Warranty

Warranty and Service

If you have any additional questions, please contact customer service.

All names and trademarks are property of Medify Air. Our company reserves the right to change the product at any time, without prior notice, and the company has no obligation to adjust products supplied earlier.

Please refer to detailed warranty terms on the following page.

To register for the lifetime warranty, please visit our website and register online at:

www.medifyair.com

Order Filters

You can order genuine Medify replacement filters at: www.medifyair.com

Lifetime Warranty

Medify guarantees your Medify Air Purifier to be free of defects in material or workmanship for a lifetime period, provided you have completed and returned your warranty registration to Medify Air within the first 30 days of purchase, and that the filters are replaced with original and genuine Medify Air replacement filters at least once every six (6) months or after 3,000 hours of use. Within the first 30 days, Medify Air will replace the defective unit at no charge to you and reimburse you for any shipping charges. After 30 days, Medify Air's obligation and liability under this Lifetime Warranty is dependent on your use of our genuine filters, purchased on our website or from our authorized resellers, which can be found on our website.

Our Lifetime Warranty remains in effect as long as:

- You submit your warranty registration to Medify Air within 30 days of purchase.
- You change filters with genuine and original Medify Air replacement filters at least once every six (6) months or after 3,000 hours of use (whichever comes first).
- 3. You use a proper power supply based on voltage: 120V.
- There is no evidence of tampering, mishandling, neglect, accidental damage, modification, and/or repair done to the Medify Air Purifier by anyone other than authorized Medify Air service personnel.
- 5. Your air purifier is operated in accordance with the provided instructions.

This Lifetime Warranty is provided by: Medify Air, 8 The Green, Dover, DE 19901.